





# Tefal<sup>®</sup>



## kitchen machine






EN










[www.tefal.com](http://www.tefal.com)

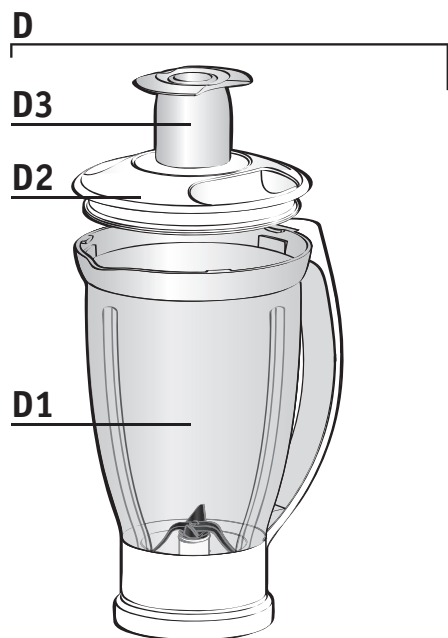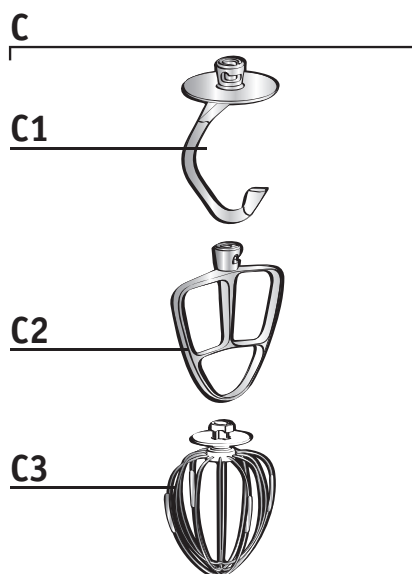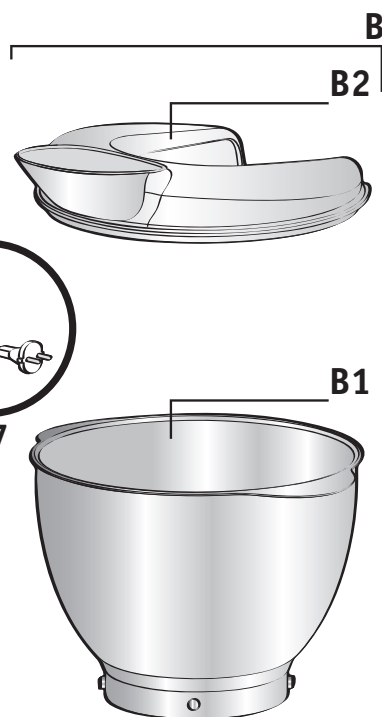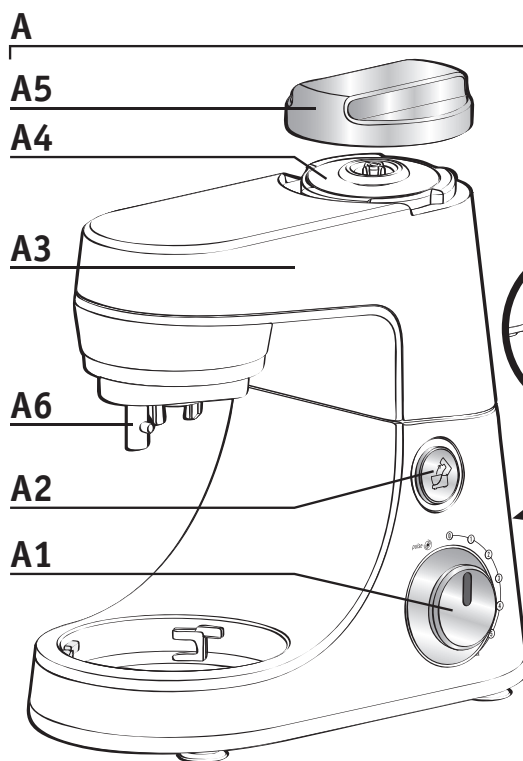

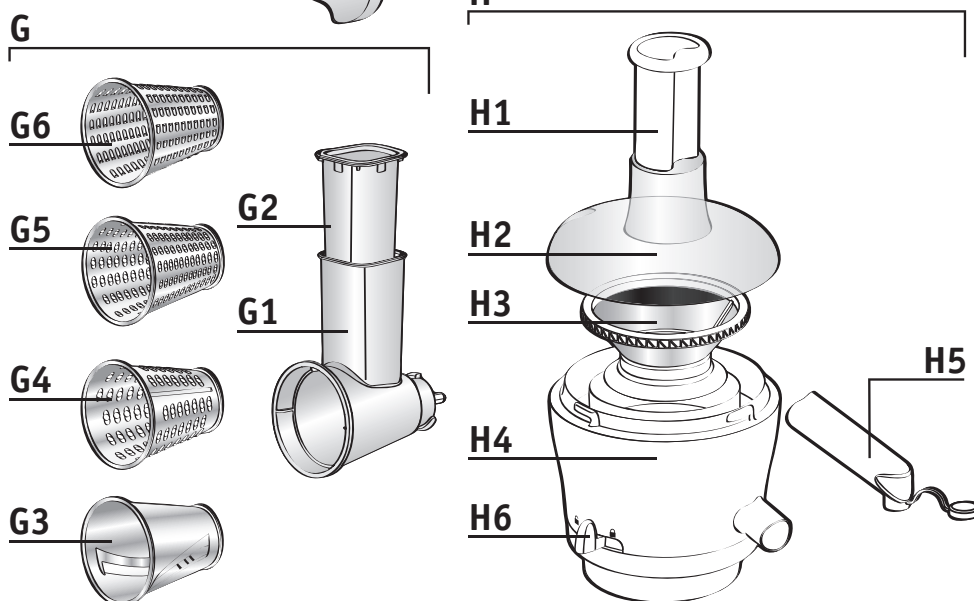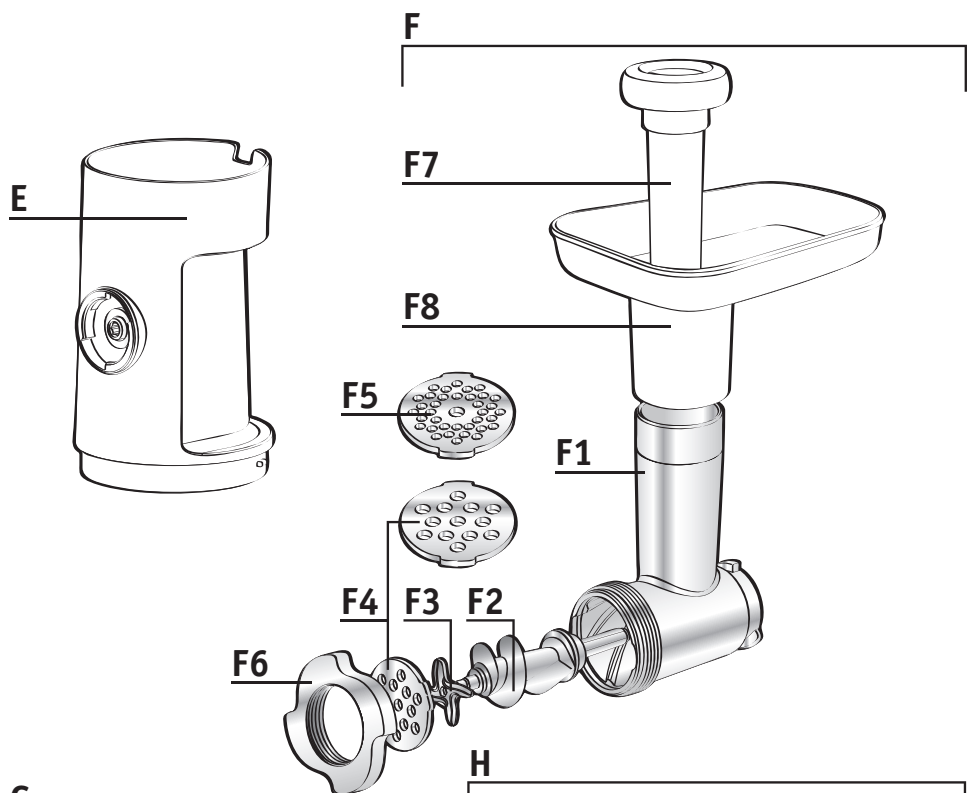


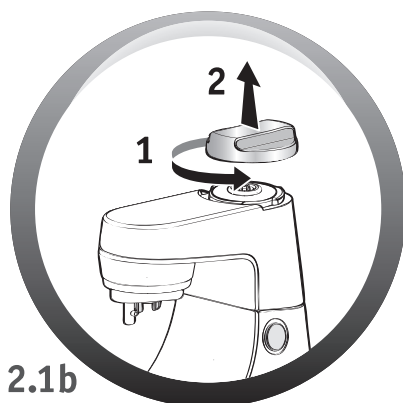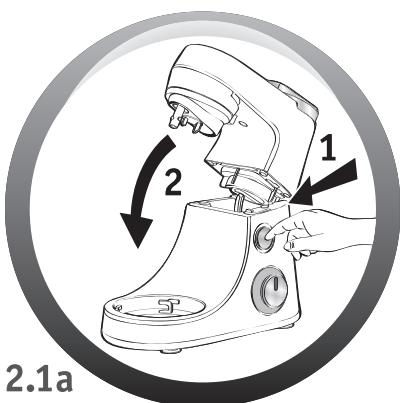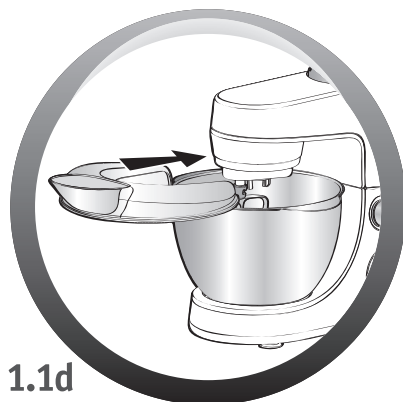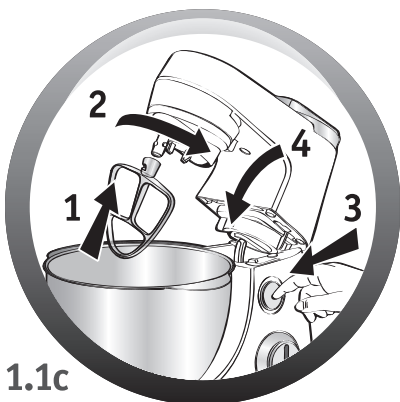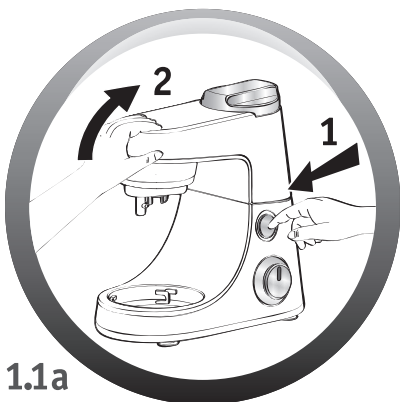

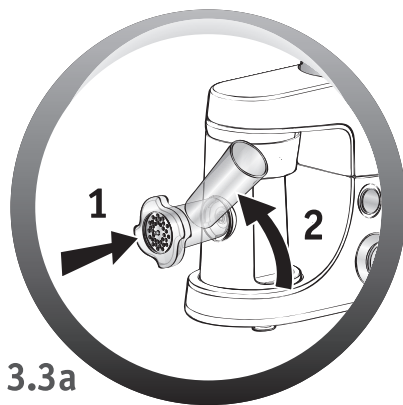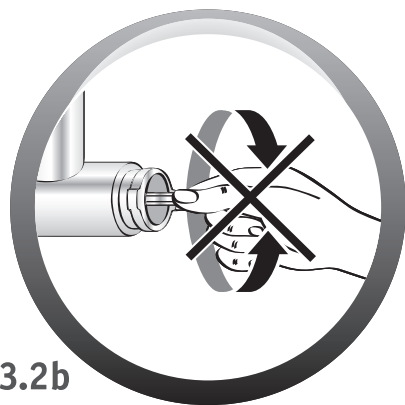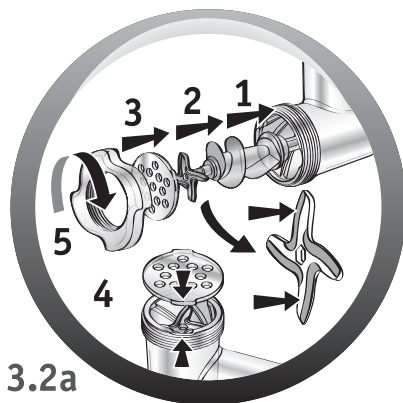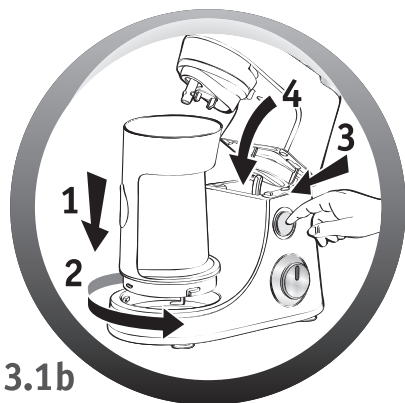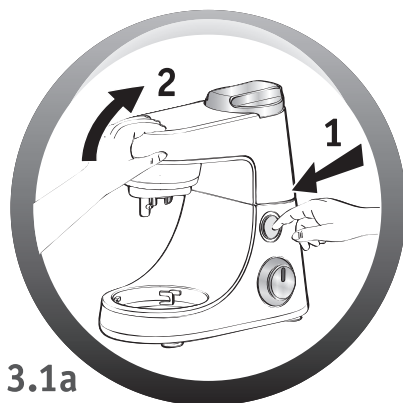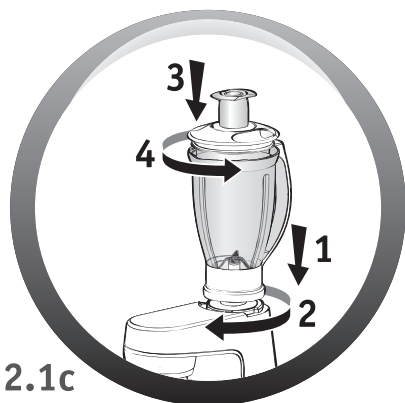


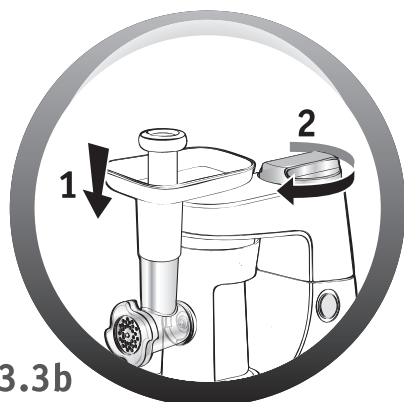


3.3b

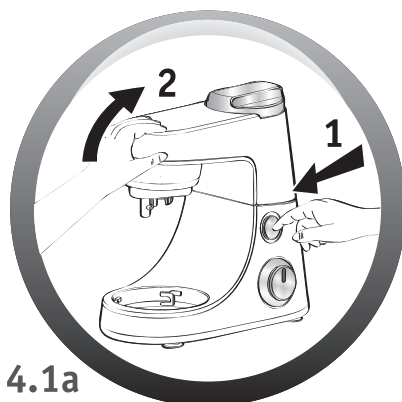


4.1a

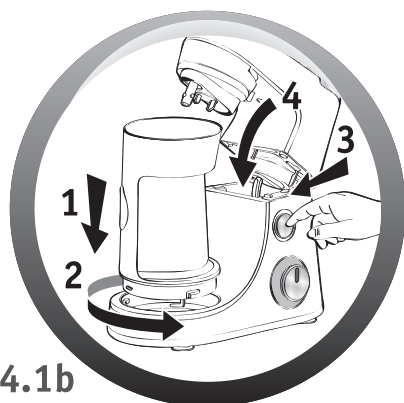


4.1b

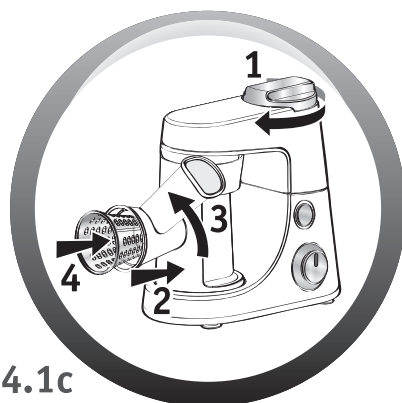





4.1c

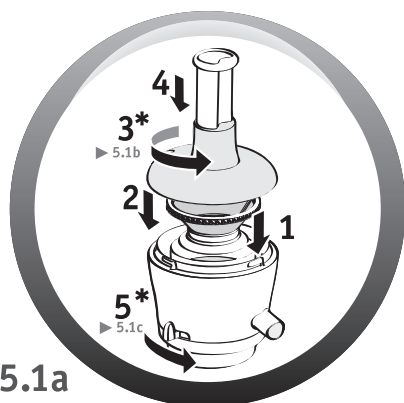

5.1a

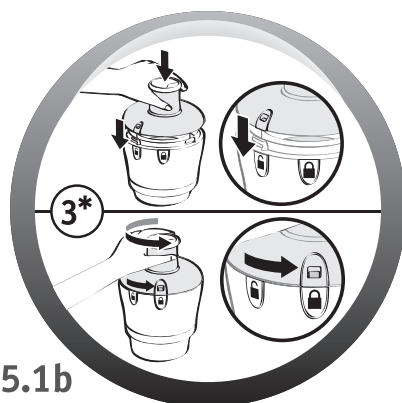

5.1b

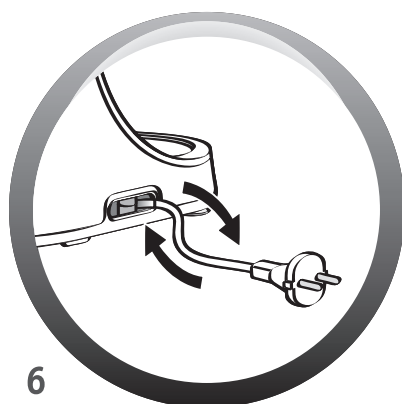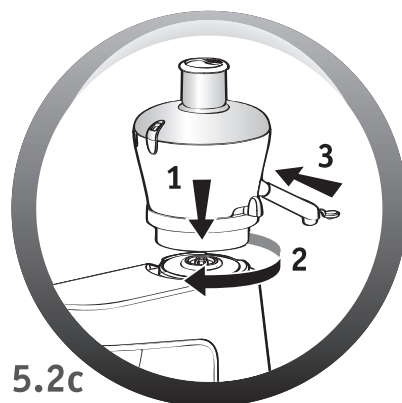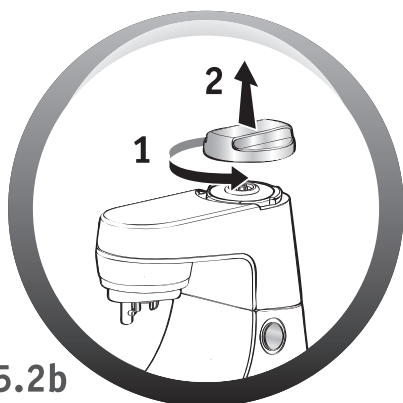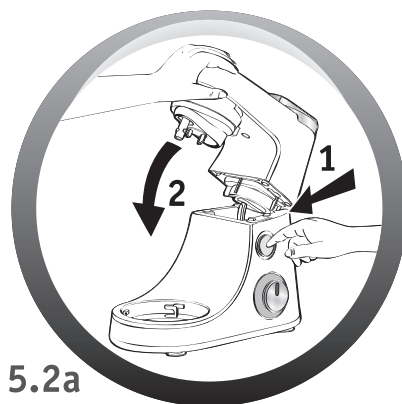

Thank you for choosing an appliance from the **Tefal** range, which is intended exclusively for the preparation of food and is only for indoor, domestic use.

## DESCRIPTION

<p><b>A - Motor unit</b></p> <p><b>a1</b> Electronic speed selector</p> <p><b>a2</b> Multi-function head (<b>a3</b>) release button</p> <p><b>a3</b> Multi-function head</p> <p><b>a4</b> High speed outlet (blender jug / juice / extractor / grinder)</p> <p><b>a5</b> Safety cover</p> <p><b>a6</b> Mixer accessories outlet (kneader, balloon whisk, mixer)</p> <p><b>a7</b> Power cord storage</p> <p><b>B - Bowl assembly</b></p> <p><b>b1</b> Stainless steel bowl</p> <p><b>b2</b> Lid</p> <p><b>C - Mixer accessories</b></p> <p><b>c1</b> Kneader</p> <p><b>c2</b> Mixer</p> <p><b>c3</b> Balloon whisk</p> <p><b>D - Blender jug (depending on model)</b></p> <p><b>d1</b> Jug</p> <p><b>d2</b> Lid</p> <p><b>d3</b> Measuring cup</p> <p><b>E - Attachment holder (depending on model)</b></p>	<p><b>F - Mincer head (depending on model)</b></p> <p><b>f1</b> Metal body</p> <p><b>f2</b> Feed screw</p> <p><b>f3</b> Blade</p> <p><b>f4</b> Large-hole screen</p> <p><b>f5</b> Small-hole screen</p> <p><b>f6</b> Nut</p> <p><b>f7</b> Pusher</p> <p><b>f8</b> Tray</p> <p><b>G - Vegetable slicer (depending on model)</b></p> <p><b>g1</b> Drum body</p> <p><b>g2</b> Pusher</p> <p><b>g3</b> Slicer drum <b>A</b></p> <p><b>g4</b> Coarse grater drum <b>C</b></p> <p><b>g5</b> Fine grater drum <b>D</b></p> <p><b>g6</b> Reibekuchen drum <b>E</b></p> <p><b>H - Juice extractor (depending on model)</b></p> <p><b>h1</b> Pusher</p> <p><b>h2</b> Lid</p> <p><b>h3</b> Rotary filter</p> <p><b>h4</b> Juice collector</p> <p><b>h5</b> Pouring spout</p> <p><b>h6</b> Locking lever</p> <p><b>I - Grinder (depending on model)</b></p>
--	---

## SAFETY INSTRUCTIONS

- Read the instructions for use carefully before using your appliance for the first time: the manufacture shall accept no liability in the event of any use that does not comply with the instructions.
- This appliance is not designed to be used by persons (including children) with reduced physical, sensorial or mental capacities, or by people with no prior knowledge or experience, except where they have benefited from supervision or previous instructions relating to the use of the appliance, from a person responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.
- Check that the power rating of your appliance corresponds to your electrical supply. **Any connection fault invalidates the warranty.**
- Your appliance is intended only for domestic culinary use, in an indoor setting and under supervision.
- Always unplug the appliance as soon as you have finished using it and when you are cleaning it.
- Do not use the appliance if it is not working properly or if it has been damaged. Contact an authorised service centre (see list in the service booklet).
- Any maintenance other than routine cleaning and upkeep by customers must be carried out by an approved service centre (see list in the service booklet).
- Do not place the appliance, the supply cable or the plug in water or any other liquid.
- The power cord must be kept out of the reach of children and must not be placed near or come into contact with the hot parts of the appliance, sources of heat or sharp corners.
- If the power cable or the plug are damaged, do not use the appliance. To maintain safety, these parts must be replaced by an approved service centre (see list in the service booklet).
- Do not place the accessories in a microwave oven.
- For your own safety, use only accessories and spare parts designed for your appliance and sold in an approved service centre.
- Always remove the blender (d) or the juice extractor (h) before pressing the multi-function head (a3) release button (a2).
- Always use the pusher (f7) with the mincer head accessory (f), to guide food in the feed tube. Never use your fingers, a fork, a spoon, a knife or any other object.
- Never touch any moving parts. Wait for the appliance to come to a complete stop before removing accessories.



- Handle the sharp blades (d, f, g) carefully when emptying the bowls and when cleaning: they are extremely sharp.
- Do not touch the whisks or the kneader when the appliance is running.
- Do not allow long hair, scarves, ties etc. to dangle over the appliance during operation.
- Never insert utensils (spoon, spatula, etc.) through the feed tube in the lids (b2), (d2) or (h2) in the drum body (g1).
- Do not run the blender jug (d1) without its lid (d2).
- Use only one accessory at a time.
- Do not use the bowls (b1, d1) as containers for freezing, cooking or sterilisation.
- Do not use the juice extractor if the rotary filter (h3) is damaged.
- Switch off the appliance and unplug from the mains supply before changing accessories or handling any parts that move during use.

## BEFORE FIRST USE

- Before using for the first time, wash all accessory parts in warm water and washing up liquid (except for the attachment (e): see cleaning paragraph) Rinse and dry.
- Place the appliance on a flat, clean and dry surface. Make sure that the selector button (a1) is in "0" position and plug in your appliance.
- You have several options for starting your appliance:
  - **Intermittent operation (pulse):** Turn the selector button (a1) to the "pulse" position. Using a succession of pulses can give you better control when preparing certain foods.
  - **Continuous operation:** Turn the selector button (a1) to the desired position from "1" to "max" depending on the food you are preparing.

You can change it as required during preparation.

- To stop the appliance, turn the button (a1) to "0".

**Important:** The appliance will start only if the cover (a5) and the head (a3) are locked. The appliance will stop immediately if you unlock the cover (a5) and/or the head (a3) during operation. Lock the cover and/or the head, turn the control button (a1) to the "0" position, and then start the appliance normally by selecting the desired speed.

Your appliance comes with a microprocessor that controls and analyses the operating power. **If the load becomes too high, your appliance will stop automatically.** To restart your appliance, turn the rotary button (a1) to the "0" position and remove some of your ingredients. Allow your appliance to cool down for a few minutes. You can then select the desired speed to complete your preparation.

The paragraph numbering corresponds to the numbers in the diagrams.

## 1 - MIXING / KNEADING / BEATING / EMULSIFYING / WHISKING

You can prepare up to 1,8 kg of dough using the stainless steel bowl (b1) and its lid (b2) depending on the food.

### ACCESSORIES USED:

- Stainless steel bowl (b1).
- Lid (b2)
- Kneader (c1) or mixer (c2) or balloon whisk (c3)

### 1.1 - ASSEMBLING THE ACCESSORIES

- Press the button (a2) to release the multi-function head (a3) and raise it until it locks in place. (Fig 1.1a).
- Lock the stainless steel bowl (b1) (clockwise) on the appliance and put in the ingredients. (Fig 1.1b)
- Insert the desired accessory (c1, c2 or c3) on the outlet (a6), push and rotate it anti-clockwise a quarter turn to lock the accessory in its housing. (Fig 1.1c).
- Place the multi-function head (a3) to the horizontal position: press the button (a2) and manually lower the multi-function head (a3) until it locks (the button (a2) returns to its initial position).
- Slide the lid (b2) over the stainless steel bowl (b1). (Fig 1.1d).

**Note:** It is not essential to use the lid but it prevents splashing.

- Make sure that the cover (a5) is locked correctly (clockwise) on the high-speed outlet (a4).

### 1.2 - USAGE

Start by turning the selector button (a1) to the desired position according to the recipe.

- The appliance starts running immediately.  
You can add food through the hole in the lid (b2) during preparation.
- To stop the appliance, turn the button (a1) to "0".

**Tips:****- Kneading**

- Use the kneader accessory (c1) **at speed "1"**.

You can knead up to 500 g of flour (e.g. white bread, grain bread, short crust pastry, etc.).

**- Mixing**

- Use the mixer (c2) **at speed "1" to "max"**.

You can mix up to 1,8 kg of light dough (light cake mixture, sponge cake, biscuit or cookie dough).

- **Never use the mixer (c2) to knead heavy dough.**

**- Beating / emulsifying / whisking**

- Use the balloon whisk (c3) **at speed "1" to "max"**.

You can prepare: mayonnaise, aioli, sauces, whisked egg whites (up to 8 egg whites), whipped cream (up to 500 ml), meringues etc.

- **Never use the balloon whisk (c3) to knead heavy dough or mix light dough.**

**1.3 - DISMANTLING THE ACCESSORIES**

- **Wait for the appliance to come to a complete stop.**

- Remove the lid (b2).

- Using the button (a2), release the multi-function head (a3) and raise it to the upper position.

- Release the accessory (c1), (c2) or (c3) from the multi-function head by pushing the accessory into the head and rotating it clockwise a quarter turn.

- Remove the stainless steel bowl.

**2 - BLENDING/MIXING (DEPENDING ON MODEL)**

Depending on the nature of the food, you can use the blender (d) to prepare up to 1.5 L of thick mixtures and 1.25 L of liquid mixtures.

**ACCESSORIES USED :**

- Blender jug (d)

**2.1 - ASSEMBLING THE ACCESSORIES**

- Place the multi-function head (a3) in the horizontal position: press the button (a2) and manually lower the multi-function head (a3) until it locks (the button (a2) returns to its initial position). (Fig 2.1a).

- Unlock the safety cover (a5) from the high-speed outlet (a4) by rotating it anti-clockwise and then remove it. (Fig 2.1b).

- Make sure that the appliance is switched off before locking the blender (d).

- Lock the blender jug (d) on the outlet (a4) by rotating it clockwise.

- Place the food in the blender jug, and lock the lid (d2) fitted with the measuring cap (d3), by rotating it anti-clockwise. (Fig 2.1c).

**2.2 - USAGE**

- Start by turning the selector button (a1) to the desired position according to the recipe.

Use the "Pulse" position for better mixing control and for a better blending of your preparation.

You can add food through the hole in the measuring cap (d3) during preparation.

- To stop the appliance, turn the button (a1) to "0".

**Tips :**

You can prepare:

- finely blended soups, cream soups, stewed fruit, milkshakes and cocktails.

- liquid batter (pancake, fritters, Yorkshire pudding, waffles, clafoutis and custard flans).

If ingredients stick to the sides of the bowl when mixing, stop the appliance. Remove the blender, and push the food down onto the blades and put your blender back to continue your preparation.

- Never fill the blender jug with boiling liquid. Only use liquids or foods at simmering temperatures or below.

- Never run the blender jug empty.

- Always use the blender jug with its lid.

- Never remove the lid before the blades have stopped completely.

- Always pour liquid ingredients into the blender jug first before adding solid ingredients.

**2.3 - DISMANTLING THE ACCESSORY**

- Wait for the appliance to come to a complete stop before removing the blender by unlocking it in the anti-clockwise direction and put back the cover (a5) by locking it on the outlet (a4) (clockwise).

### 3 - MINCING (DEPENDING ON MODEL)

#### ACCESSORIES USED :

- Attachment holder (e)
- Assembled mincer head (f)

#### 3.1 - FITTING THE MINCER ATTACHMENT

- Press the button (a2) to release the multi-function head (a3) and raise it until it locks in place. (Fig 3.1a).
- Place the attachment (e) and lock it in the anti-clockwise direction such that the outlet is in alignment with the appliance. (Fig 3.1b).
- Place the multi-function head (a3) in the horizontal position by pressing the button (a2) once again.

#### 3.2 - ASSEMBLING THE MINCER HEAD

- Hold the body (f1) by the feed tube, with the wider opening uppermost.
- Insert the feed screw (f2) (long shaft first) into the body (f1). (Fig 3.2a).
- Fit the blade (f3) onto the short shaft protruding from the feed screw (f2) with the cutting edges facing outwards.
- Fit the chosen screen (f4 or f5) on the blade (f3), aligning the two lugs with the two notches in the body (f1).
- Screw the nut (f6) home on the body (f1) in the clockwise direction, without locking it.
- Check the assembly. The shaft should have no play, neither should it be able to turn on its own. Otherwise, repeat the assembly procedure. (Fig 3.2b).

#### 3.3 - FITTING THE MINCER HEAD ON THE APPLIANCE

- Facing the attachment outlet (e), insert the assembled mincer head (f) inclined to the right, aligning the two bayonets in the mincer head with the two notches in the attachment. Push the mincer head home into the attachment and turn the mincer head anti-clockwise until it latches with the feed tube in the vertical position. (Fig 3.3a).
- Place the removable tray (f8) on the feed tube. (Fig 3.3b).
- Turn the safety cover (a5) clockwise on the high speed outlet (a4).

#### 3.4 - USAGE, TIPS AND DISMANTLING

- Make sure that the safety cover (a5) is locked correctly (clockwise) on the high-speed outlet (a4).
- Place a container to collect the preparation in front of the appliance.
- Run the appliance by turning the selector (a1) to speed "3" or "4".
- Push the meat, piece by piece, down the feed tube, using the pusher (f7). **Never push the ingredients down the feed tube with your fingers or any other utensil.**
- To stop the appliance, turn the selector to "0" speed and wait for the appliance to come to a complete stop.
- Unlock the mincer head in the reverse order of the assembly.

#### Tips :

- Prepare all of the foodstuffs to be minced (for meat, remove the bones, gristle and tendons and cut it into pieces of approximately 2 x 2 cm).
- Make sure that frozen meat is thoroughly thawed.
- At the end of the operation, you can feed a few small pieces of bread into the feed tube to clear any meat remaining in the machine.

### 4 - GRATING / SLICING (DEPENDING ON MODEL)

#### ACCESSORIES USED :

- Attachment holder (e)
- Assembled vegetable slicer (g)
- Drums (depending on model)

#### 4.1 - ASSEMBLING THE ACCESSORIES

- Press the button (a2) to release the multi-function head (a3) and raise it until it locks in place.
- Insert the attachment (e) and lock it in an anti-clockwise direction so that the outlet is aligned to the left of the appliance.
- Place the multi-function head (a3) in the horizontal position by pressing the button (a2) once again. (Fig 4.1b).

- Make sure that the safety cover (a5) is locked correctly (clockwise) on the high-speed outlet (a4). (Fig 4.1c).
- Position the attachment (e) facing you, insert the drum body (g1) inclined to the right, aligning the two bayonets in the drum body with the two notches in the attachment. Push the drum body home and turn the drum body anti-clockwise until it latches with the feed tube in the vertical position.
- Insert the chosen drum into the body, and make sure that it is fully engaged in the body.

#### 4.2 - USAGE AND TIPS

- Place a container to collect the preparation in front of the appliance.
- Run the appliance by turning the selector (a1) to speed "3" to slice and to speed "4" to grate.
- Place the food in the feed tube on the body and press down with the pusher (g2). **Never push the ingredients with your fingers or any other utensil.**
- To stop the appliance, turn the selector to "0" speed and wait for the appliance to come to a **complete stop**.
- Unlock the drum body in the reverse order of the assembly.
- Use the drums to :
  - Grate coarsely C (g4) / grate finely D (g5): carrots, celery, potatoes, cheese, etc.
  - Slice thickly A (g3): potatoes, carrots, cucumbers, apples, beetroot, etc.
  - Reibekuchen E (g6): potatoes, parmesan, etc.

### 5 - EXTRACTING JUICE FROM FRUITS AND VEGETABLES (DEPENDING ON MODEL)

#### ACCESSORIES USED :

- Assembled juice extractor (h).

#### 5.1 - ASSEMBLING THE JUICE EXTRACTOR

- Place the filter (h3) in the middle of the juice collector (h4). (Fig 5.1a).
- Lock the lid: turn it anti-clockwise and lock the lid (h2) on the juice collector (h4) (closed padlock position). (Fig 5.1b).
- General locking: push the locking lever (h6) to closed padlock position. (Fig 5.1c).

#### 5.2 - FITTING THE JUICE EXTRACTOR ON THE APPLIANCE

- Place the multi-function head (a3) in the horizontal position: press the button (a2) and manually lower the multi-function head (a3) until it locks (the button (a2) returns to its initial position).
- Unlock and remove the cover (a5) from the outlet (a4) by turning it anti-clockwise.
- Make sure that the appliance is switched off before locking the juice extractor (h).
- Lock the assembled juice extractor on the outlet (a4) by turning it clockwise, so as to have the outlet for the pouring spout aligned with the appliance.
- Fit the pouring spout (h5) on the collector (h4).

#### 5.3 - USAGE AND TIPS

- Place a large glass under the pouring spout (h5).
- Run the appliance by turning the selector (a1) to speed "3".
- Cut the fruits and/or vegetables into pieces.
- Insert them down the feed tube in the lid (h2) push them slowly using the pusher (h1). **Never push the ingredients with your fingers or any other utensil.**
- Do not process 500 g of food more than 5 times continuously, without allowing your appliance to cool down completely.
- For best results, clean the filter after every 300 g of ingredients.
- **Important:** When the pulp collector is full, stop the appliance and empty the collector.
- To stop the appliance, turn the selector to "0" speed and wait for the appliance to come to a complete stop.
- **Wait until the rotary filter comes to a complete stop before removing the assembly from the appliance.**
- To remove the juice extractor, unlock it by turning it anti-clockwise.
- Place the locking lever (h6) in the open padlock position. Open the lid (open padlock position). You can then remove the filter (h3) to clean it and empty the collector (h4).

#### Tips :

- You can make juice from: carrots, tomatoes, apples, grapes, raspberries, etc.
- Peel fruits with thick skins; remove stones and the core of pineapples.
- It is not possible to extract juice from certain fruits and vegetables: bananas, avocado pears, blackberries, etc.
- You can prepare juices with different fruits and vegetables without having to clean the juice extractor every time, the flavours will not be mixed. Just run the extractor with a little water to rinse it between two different juices.
- Drink the juices immediately after preparation, and add lemon juice to keep them in the fridge for a few hours.

## 6 - ADJUSTING THE CORD LENGTH

For more comfortable use or for storage, you can reduce the cord length by pushing it inside the motor unit (a) via the opening on the rear (a7). (Fig 6).

## 7 - FINELY CHOPPING SMALL QUANTITIES (DEPENDING MODEL)

### ACCESSORY USED :

- Assembled grinder (i), (refer to the grinder instruction booklet for details on assembly).

### You can use the grinder to :

- Chop in a few seconds by pulsing: dried figs, dried apricots, etc.

Quantity / max time: 100g / 5s

This grinder is not designed for hard products like coffee beans or hard spices.

## CLEANING

- Unplug the appliance.
- Do not immerse the motor unit (a) or the attachment (e) in water or under running water. Wipe them with a dry or slightly damp cloth.
- For easier cleaning, rinse the accessories quickly after use. Dismantle the mincer head assembly fully. **Handle the blades with care to prevent injury.**
- Wash, rinse and dry the accessories: they are dishwasher-safe, except for all the metal components in the mincer head: body (f1), feed screw (f2), blade (f3), screens (f4 and f5), nut (f6).
- The screens (f4) and (f5) as well as the blade (f3) must remain greased. Coat them with cooking oil.

### Tips :

- In the event any of your accessories are coloured by food (carrots, oranges, etc.), rub with a cloth soaked in cooking oil and then clean them as usual.
- Blender jug (d): pour some hot water containing a few drops of washing up liquid into the blender. Close the lid. Place it on the appliance and pulse a few times. After removing it, rinse the jug in running water and allow to dry (jug upside down).

## STORAGE

Do not store your appliance in a humid environment.

## WHAT TO DO IF YOUR APPLIANCE DOES NOT WORK

If your appliance does not work, check:

- that it is plugged in correctly.
- that the accessories are correctly locked.
- that the safety cover (a5) is present and locked when the high-speed outlet (a4) is not used.
- that the multi-function head (a3) is locked horizontally.

Your appliance comes with a microprocessor that controls and analyses the operating power. If the load becomes too high, your appliance will stop automatically. To restart your appliance, turn the speed control (a1) to the "0" position and remove some of your ingredients. Allow your appliance to cool down for a few minutes. You can then select the desired speed to complete your preparation.

### HELPLINE:

If you have any product problems or queries, please contact our Customer Relations Team first for expert help and advice: 0v845 602 1454 – UK / (01) 677 4003 – Ireland / 02 97487944 - Australia

## DISPOSAL OF PACKAGING AND THE APPLIANCE



The packaging is comprised exclusively of materials that present no danger for the environment and which may therefore be disposed of in accordance with the recycling measures in force in your area. For disposing of the appliance itself, please contact the appropriate service of your local authority.

## END-OF-LIFE ELECTRICAL OR ELECTRONIC PRODUCTS



### Think of the environment!

- ① Your appliance contains valuable materials which can be recovered or recycled.
- ② Leave it at a local civic waste collection point.

## ACCESSORIES

You can customise your appliance and obtain the following accessories from your usual retailer or an authorised service centre:

Stainless steel bowl Stainless steel bowl lid Kneader Mixer Balloon whisk Blender jug Juice extractor Grinder Attachment holder	Mincer head Vegetable slicer: <ul style="list-style-type: none"> <li>- A: Slicer</li> <li>- C: Coarse grating</li> <li>- D: fine grating</li> <li>- E: reibekuchen (potato rosti) grater</li> </ul> Pasta shaping kit Coulis attachment Pasta rolling mill
---	---

**Caution:** This booklet contains instructions for additional accessories. Please keep safe for future reference. You can purchase new or replacement items directly from Tefal Customer Relations.

## TELFAL / T-FAL INTERNATIONAL GUARANTEE

### Date of purchase

Date d'achat / Fecha de compra / Data da compra / Data d'acquisto / Kaufdatum / Aankoopdatum / Købsdato / Inköpsdatum / Kjøpsdato / Ostopäivä / Data zakupu / Data vânzării / Įsigijimo data / Ostukuupäev / Datum nakupa / Sorozatszám / Datum nákupu / Pirkuma datums / Datum Kupovine / Datum kupnje / Data cumpărării / Datum nákupu / Tarikh pembelian / Tanggal pembelian / Ngày mua hàng / Satın alma tarihi / Дата продаж / Дата на закупуване / Датум на купување / Сатылган мерзімі / Ημερομηνία αγοράς / Հանձման օրը / วันที่ซื้อ / 購買日期 / 購入日 / 구입일자 / تاريخ خيرات / تاريخ الشراء / تاریخ خرید

### Product reference

Référence du produit / Referencia del producto / Nome do produto / Tipo de prodotto / Typnummer des Gerätes / Artikelnummer van het apparaat / Referencenummer / Produktreferens / Artikkelnummer / Tuotenumero / referencia produktu / Model / Gaminio numeris / Toote viitenumber / Tip aparata / Vásárlás kelte / Typ výrobku / Produkta atsauces numurs / Model proizvoda / Oznaka proizvoda / Cod produs / Produk rujuk / Referensi produk / Mã sản phẩm / Ürün kodu / Модель / Модель / Модел на уреда / Modeli / Κωδικός προϊόντος / Идентификационный номер / 產品型號 / 製品レファレンス番 / 제품명 / لمدالک چيندل عجرم / لمدالک چيندل عجرم / لمدالک چيندل عجرم

### Retailer name & address

Nom et adresse du vendeur / Nombre y dirección del minorista / Nome e endereço do revendedor / Nome e indirizzo del negozio / Name und Anschrift des Händlers / Naam en adres van de dealer / Forhandler navn & adresse / Återförsäljarens namn och adress / Forhandler navn og adresse / Jälleenmyyjän nimi ja osoite / nazwa i adres sprzedawcy / Numele și adresa vânzătorului / Parduotuvės pavadinimas ir adresas / Müüja kauplus ja aadress / Naziv in naslov trgovine / Tipuszzám / Názov a adresa predajcu / Veikala nosaukums un adrese / Naziv i adresa maloprodaje / Naziv i adresa prodavca / Naziv i adresa prodajnog mjesta / Nume și adresă vânzător / Název a adresa prodeje / Nama dan alamat peruncit / Nama Toko Penjual dan alamat / Tên và địa chỉ cửa hàng bán / Satıcı firmanın adı ve adresi / Название и адрес продавца / Назва i adresa prodavca / Търговски обект / Назив и адреса на продавницата / Сатушының аты және мекен-жайы / Επωνυμία και διεύθυνση καταστήματος / Հանձմանը անվանումը և հասցեն / ชื่อและที่อยู่ของทาง / วันที่ซื้อ / 零售商的店名和地址 / 販売店の名前、住所 / 소매점 이름과 주소 / شريف خرڅ سرد مان / او مان وونع و خيز چيندل عياب جسا / شريف خرڅ سرد مان / او مان وونع و خيز چيندل عياب جسا

### Distributor stamp

Cachet distributeur / Sello del distribuidor / Carimbo do revendedor / Timbro del negozio / Händlerstempel / Stempel van de dealer / Forhandler stempel / Återförsäljarens stämpel / Forhandler stempel / Jälleenmyyjän leima / pieczęć sprzedawcy / Štampila vânzătorului / Antspaudas / Tempel / Žig trgovine / Eladó neve, címe / Razitko predajcu / Zímogs / Pečat maloprodaje / Pečat prodavca / Pečat prodajnog mjesta / Štampila vânzătorului / Razitko prodeje / Cap peruncit / Cap dari Toko Penjual / Cửa hàng bán đóng dấu / Satıcı Firmanın Kaşesi / Печать продавца / Печатка продавца / Печат на търговския обект / Печат на продавницата / Сатушының мөрі / Σφραγίδα καταστήματος / Հանձմանը անվանումը և հասցեն / ชื่อและที่อยู่ของทาง / วันที่ซื้อ / 零售商的蓋印 / 販売店印 / 소매점 직인 / شريف خرڅ سرد مان / او مان وونع و خيز چيندل عياب جسا / شريف خرڅ سرد مان / او مان وونع و خيز چيندل عياب جسا

INTERNATIONAL GUARANTEE: COUNTRY LIST



www.tefal.com



ALGERIA	CUJ49 rue Puvis de ChavannesSaint Etienne Oran	1 YEAR	(0)41 28 18 53
ARGENTINA	GRUPE SEB ARGENTINA S.A., Billinghurst 1833 3°, C1425DTK Capital Federal, Buenos Aires	2 YEARS (afños)	0800-122-2732
ARMENIA (ՀԱՅԱՍՏԱՆ)	ՓԻԷՇ "Գրուպը ՍԵԲ", 125171, Մոսկվա, Նիկոլայեցկայա խճուղի, 16A, գկ.3	2 YEARS (ամիս)	(010) 55-76-07
AUSTRALIA	GRUPE SEB AUSTRALIA, PO Box 7535, Silverwater, NSW 2128	1 YEAR	02 97487944
AUSTRIA (ÖSTERREICH)	SEB ÖSTERREICH HmbHCampus 21 - Businesspark Wien Süd, Liebermanstr. A02 7022345 Brunn am Gebirge	2 YEARS (Jahre)	01 866 70 299 00
BELGIUM (BELGIE / BELGIE)	GRUPE SEB BELGIUM SA NV25 avenue de l'Espérance - Z16220 Fleurus	2 YEARS (ans)	070 23 31 59
BELARUS (БЕЛАРУСЬ)	ЗАО «Група СЕБ-Восток», 125171, Москва, Ленинградское шоссе, д. 16А, стр. 3	2 YEARS (года)	017 2239290
BOSNA I HERCEGOVINA	SEB Développement, Predstavništvo u BiH, Vrazova 8/II, 71000 Sarajevo	2 YEARS (godine)	Info-linija za potrošače 033 551 220
BRAZIL (BRASIL)	SEB COMERCIAL DE PRODUTOS DOMÉSTICOS LTDA, Rua Venâncio Aires, 433437/447, Pompéia, São Paulo/SP	1 YEAR (ano)	0800-119833
BULGARIA (БЪЛГАРИЯ)	ГРУП СЕБ БЪЛГАРИЯ ЕООД, Ул. Борово 52 Г, ет. 1, офис 1, 1680 София	2 YEARS (години)	0700 10 330
CANADA	GRUPE SEB CANADA, 345 Passmore Avenue, Toronto, ON M1V 3N8	1 YEAR (an)	800-418-3325
CHILE	GRUPE SEB CHILE Comercial Ltda, Av. Providencia, 2331, piso 5, oficina 501, Santiago	2 YEARS (afños)	12300 209207
COLOMBIA	GRUPE SEB COLOMBIA, Apartado Aereo 172, Kilometro 1Vía ZipaquiráCajica, Cundinamarca	2 YEARS (afños)	18000919288
CROATIA (HRVATSKA)	SEB Développement S.A.S.Vodnjanska 26, 10000 Zagreb	2 YEARS (godine)	01 30 15 294
CZECH REPUBLIC (ČESKÁ REPUBLIK)	GRUPE SEB ČR spol. s r. o.Jankovcova, 1569/2c170 00, Praha 7	2 YEARS (roky)	731 010 111
DENMARK (DANMARK)	GRUPE SEB NORDIC, AStempovej 27, 2750 Ballerup	2 YEARS (år)	44 663 155
GERMANY (DEUTSCHLAND)	GRUPE SEB DEUTSCHLAND GmbH / KRUPS, GmbHHerrrainweg 5, 63067 Offenbach	2 YEARS (Jahre)	0212 387 400
ESTONIA (EESTI)	GRUPE SEB POLSKA Sp. z. o.o. ul. Bukowińska 22b02-703, Warszawa	2 YEARS (aasta)	5 800 3777
FINLAND (SUOMI)	GRUPE SEB FinlandKutojantie 7, 02630 Espoo	2 YEARS (Vuotta)	09 622 84 20
Guadeloupe, Martinique, Réunion, Saint Martin (France continentale)	GRUPE SEB FRANCE Service, Consommateur MoulinexBP, 1569131 ECULLY CEDEX	1 YEAR (an)	09 74 50 10 14
GREECE (ΕΛΛΑΔΑ)	SEB GROUPE ΕΛΛΑΔΟΣ Α.Ε.Οδός Καβαλέρηδου 77Κ., 145 64 Ν. Κηφισιά	2 YEARS (χρόνια)	2106371251
HONG KONG (香港)	SEB ASIA Ltd., Room 903, 9/F South Block, Skyway House3 Sham Mong Road, Tai Kok Tsui, Kowloon, Hong Kong	1 YEAR	852 8130 8998

INTERNATIONAL GUARANTEE: COUNTRY LIST



www.tefal.com



HUNGARY (MAGYARORSZÁG)	GRUPE SEB CENTRAL-EUROPE, Kft.Táviró köz 4., 2040 Budaörs	2 YEAR (év)	06 1 801 8434
INDONESIA	GRUPE SEB INDONESIA, (Representative office) Sudirman Plaza, Plaza Marein 8th Floor/L Jendral Sudirman Kav 76-78 Jakarta 12910, Indonesia	1 YEAR	+62 21 5793 8881
ITALY (ITALIA)	GRUPE SEB ITALIA, S.p.A., Via Montefeltro, 420156 Milano	2 YEARS (anni)	1 99 207 892
JAPAN	GRUPE SEB JAPAN Co. Ltd., 1F Takanawa Muse Building, 3-14-13, Higashi Gotanda, Shinagawa-Ku, Tokyo 141-0022	1 YEAR	0570-077772
KAZAKHSTAN (ҚАЗАҚСТАН)	ЖАҚ «Группа СЕБ- Восток»125171, Маскеу, Ленинградское шоссе, 16А, 3 үйі	2 YEARS (жыл)	727 378 39 39
KOREA (한국어)	(유)그룹 세브 코리아서울시 종로구 서린빌딩 3층, 110-790	1 YEAR	1588-1588
LATVIA (LATVIA)	GRUPE SEB POLSKA, Sp. z o.o.l., Bukowińska 22b02-703, Warszawa	2 YEARS (gadzi)	6 716 2007
LITHUANIA (LIETUVA)	GRUPE SEB POLSKA, Sp. z o.o.l., Bukowińska 22b02-703, Warszawa	2 YEARS (meta)	6 470 8888
LUXEMBOURG	GRUPE SEB BELGIUM, SA NV25 avenue de l'Espérance - ZI6220, Fleurus	2 YEARS (ans)	0032 70 23 31 59
MACEDONIA	Група СЕБ България, FOODOffice 1, floor 1, 52G Boroovo St., 1680 Sofia - Bulgaria	2 YEARS (години)	(0)2 2050 022
MALAYSIA	GRUPE SEB MALAYSIA SDN., BHDUnit No. 402-403, Level 4, Uptown 2, No. 2, Jalan SS21/37, Damansara Uptown, 47400, Petaling Jaya, Selangor D.E Malaysia	1 YEAR (año)	65 6550 8900
MEXICO	Grupos S.E.B. México, S.A. DE C.V. Goldsmith 38 Desp. 401, Col. PolancoDelegación, Miguel Hidalgo011, 560 México D.F.	2 YEARS (años)	(01800) 112 8325
MOLDOVA	ТОВ «Група СЕБ Україна»02121, Харківське шосе, 201-203, 3 поверх, Київ, Україна	2 YEARS (ani)	(22) 929249
THE NETHERLANDS (NEDERLAND)	GRUPE SEB NEDERLAND, BVGeneratorstraat, 63903 L.J Veenendaal	2 YEARS (jaar)	0318 58 24 24
NEW ZEALAND	GRUPE SEB NEW ZEALAND, Unit E, Building 3, 195 Main Highway, Ellerslie, Auckland	1 YEAR	0800 700 711
NORWAY (NORGE)	GRUPE SEB NORDIC, ASTempovej, 272750 Ballerup	2 YEARS (år)	815 09 567
PERU	Grups SEB Perú, Av. Camino Real N° 111 of 805 B, San Isidro - Lima	1 YEAR (año)	441 4455
POLAND (POLSKA)	GRUPE SEB POLSKA, Sp. z o.o.l. Bukowińska 22b02-703, Warszawa	2 YEARS (lata)	koszt jak za polaczenie lokalne 0801 300 423
PORTUGAL	GRUPE SEB IBÉRICA, SAUrb. da MatinhaRua Projectada à Rua 3Bloco1 - 3° B/D 1950 - 327 Lisboa	2 YEARS (años)	808 284 73
REPUBLIC OF IRELAND	GRUPE SEB IRELAND, Unit B3 Aerodrome Business Park, College Road, Rathcoole, Co. Dublin	1 YEAR	01 677 4003
ROMANIA (ROMÂNIA)	GRUPE SEB ROMÂNIA, Str. Daniel Constantin nr., 8010632 Bucuresti	2 YEARS (ani)	0 21 316 87 84
RUSSIA (РОССИЯ)	ЗАО «Группа СЕБ-Восток», 125171, Москва, Ленинградское шоссе, д. 16А, стр. 3	2 YEARS (години)	495 213 32 29



INTERNATIONAL GUARANTEE: COUNTRY LIST



SERBIA (SRBIJA)	SEB Developpement, Đorđa Stanojevića, 11b11070 Novi Beograd	2 YEARS (godine)	060 0 732 000
SINGAPORE	GROUPE SEB SINGAPORE Pty Ltd., 59 Jalan Pemimpin, #04-01/02 L&Y Building, Singapore 577218	1 YEAR	65 6550 8900
SLOVENSKO (SLOVENSKO)	GROUPE SEB Slovensko, spol. s r.o. Rybníčka 40, 831 06 Bratislava	2 YEARS (roky)	233 595 224
SLOVENIA (SLOVENIJA)	SEB d.o.o Gregorčičeva ulica, 62000 MARIBOR	2 YEARS (leti)	02 234 94 90
SPAIN (ESPAÑA)	GROUPE SEB IBÉRICA S.A./Almogávers, 119-123, Complejo Ecurban, 08018 Barcelona	2 YEARS (años)	902 31 22 00
SWEDEN (SVERIGE)	TEFAL SVERIGE SUBSIDIARY OF GROUPE SEB NORDIC, Truckvägen 14 A, 194 52 Upplands Väsby	2 YEARS (år)	08 594 213 30
SWITZERLAND (SUISSE CHWEIZ)	GROUPE SEB SCHWEIZ GmbH, Thurgauerstrasse, 1058152 Glatthugg	2 YEARS (ans / Jahre)	044 837 18 40
TAIWAN (台灣)	SEB ASIA Ltd., Taiwan Branch, 4F., No. 37 Dexing W. Rd., Shilin Dist., Taipei City 11158,Taiwan (R.O.C.)	1 YEAR	886-2-2833 3716
THAILAND	GROUPE SEB THAILAND, 2034/66 Ialithai Tower, 14th Floor, n° 14-02, New Phetchburi Road, Bangkok, Huaykwang, Bangkok 10320	2 YEARS	662 351 8911
TURKEY (TÜRKIYE)	GROUPE SEB ISTANBUL, ASBeybi Giz Plaza Dereboyu, Cad Meydan Sok No: 28 K.12 Maslak	2 YEARS (YIL)	216 444 40 50
U.S.A.	GROUPE SEB USA, 2121 Eden Road, Millville, NJ 08332	1 YEAR (an)	800-395-8325
UKRAINE (Україна)	ТОВ «Грун СЕБ Україна»02121, Харківське шосе, 201-203, 3 поверх, Київ, Україна	2 YEARS (роки)	044 492 06 59
UNITED KINGDOM	GROUPE SEB UK LTD, Riverside House, Riverside WalkWindor, Berkshire, SL4 1NA	1 YEAR	0845 602 1454
VENEZUELA	GROUPE SEB VENEZUELA, Av Eugenio Mendoza, Centro Letonia, Torre ING Bank, Piso 15, Ofc 155Urb. La Castellana, Caracas	2 YEARS (años)	0800-7268724
VIETNAM	Vietnam Fan Joint Stock Company, 25 Nguyen Thi Nho Str, Ward 9 , Tan Binh Dist, HCM city	1 YEAR	+84-8 39644037 +84-8 39645830

# Tefal®

**EN** P. 8-14

Ref. 8080012365-01