

**DESCRIPTION**

- A. Safety cap
- B. Ceramic plates
- C. Temperature indicator
- D. Switch on/off / temperature setting
- E. Charge indicator
- F. Charge port
- G. Power adapter
- H. Usb cable

**SAFETY**

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.

• For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.

• **WARNING:** The crossed bath tub symbol (ISO 7010-P026 (2011-05) on the appliance means not to use this appliance near bathtubs, showers, basins or other vessels containing water.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• **WARNING:** Please don't touch the area out of handle to avoid scald when using.

- If your appliance is dropped and works abnormally after, don't use your appliance and contact after sales service.
- The appliance must be unplugged or/and switch OFF :
  - before cleaning and maintenance procedures.
  - if it is not working correctly.
  - as soon as you have finished using it.
  - if you leave the room, even momentarily.
  - after battery charge.
- Do not open the battery cover.
- Do not immerse or put under running water, even for cleaning purposes.
- Do not hold with damp hands.
- Do not hold the appliance by the casing, which is hot, but by the handle.
- Do not unplug by pulling on the cord, rather pull out by the plug.
- Do not charge your straightener while you are charging your phone.
- Don't use electrical extension cord.
- Do not use at temperatures below 0°C and above 35°C.
- Do not use on wet hair.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down
- When the appliance is connected to the power supply, never leave it unattended
- Do not clean with abrasive or corrosive products.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

•  Detachable supply unit

- **WARNING :** For the purposes of recharging the battery, only use the detachable supply unit 0935 provided with this appliance.
- The power bank is only dedicated for phone usage.
- When the appliance is connected to the power supply, never leave it unattended.
- Do not put the protective cap on when the appliance is switched on.
- Always put the protective cap on when the appliance is cold.

• For countries subject to EU regulations (CE marking) : This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• The battery must be removed from the appliance before it is disposed of.

• The appliance must be disconnected from the supply mains when removing the battery.

• The battery is to be disposed of safely.

- For other countries not subject to EU regulations : This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance contains batteries that are only replaceable by skilled persons.

• **WARNING :** Keep the appliance in a dry place.

• **Caution :** Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

**BEFORE FIRST USE**

Before first use, make sure that the battery is charged and your hair is dry.

**USING THE APPLIANCE**

Your hair must be dry , clean and tangle free to avoid damaging it.

- Do not use the appliance on synthetic hair (wigs, extensions, etc.).
- Take a small section of hair a few centimetres wide, comb it and place it between the plates. Close the plates firmly and slide the appliance slowly down the length.
- The ceramic coating of the plates protects your hair against excessive temperatures, by distributing the heat in a uniform manner.
- Do not clean your appliance with abrasive or corrosive products.

How should you recharge your straightener battery ?

1. Insert the main cable plug to power supply , connect the transformers : the charge LED light will flash.
  2. The appliance needs 3 hours to be completely charged : the charge LED light will stop flashing when the appliance is completely charged.
- In case of prolonged non-use of your straightener, please ensure that it is fully charged.

To help you decide the most suitable straightening temperature for your hair, here's a guide :

- From 160°C for fragile, fine, coloured or discoloured hair : when the green LED stops flashing, the appliance is ready to use.
- From 200°C for healthy, resistant, robust hair : when the red LED stops flashing, the appliance is ready to use.

How should you touch-up your straight hair ?

1. Select the desired temperature.
2. Place the section of hair that must be touched-up between the plates, at the roots.
3. Close the plates and glide the straightener along the hair to the ends.

How should you touch-up your curl/ styled your hair ?

1. Select the desired temperature.
2. Place the section of hair that must be touched-up between the plates, at the roots (as if you were straightening your hair).
3. Turn the appliance through a half-turn (180°).
4. Slowly slide the appliance down.

How should you recharge phone ?


1. Put your thermo-resisting cap on your straightener.
  2. Be sure your switch is OFF.
  3. Charge your phone by using your phone USB cable.
- With this function, your plate can warm up, please be careful.

**CLEANING / RECYCLING**

**WARNING: Always remove the plug and leave the appliance to cool down on a heat-resistant, flat, stable surface before cleaning.**

- Never immerse your appliance in water or any other liquid.
- To clean your appliance: unplug it, allow to cool down completely, then wipe down with a damp cloth and dry using a dry cloth.

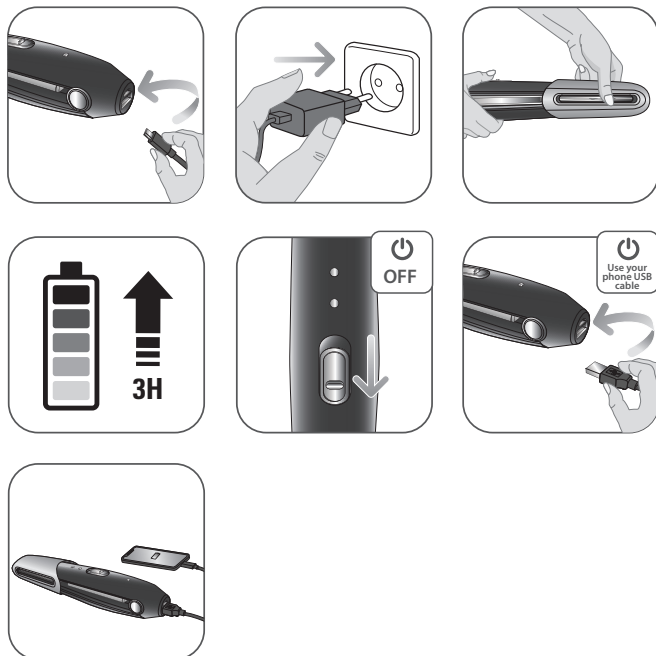
**ENVIRONMENT PROTECTION FIRST!**

-  ① Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

This appliance uses a battery. To protect the environment, do not throw away dead batteries, instead, take them to a battery collection point. Do not dispose of with household waste. Recycling the batteries  
Before removing the Li-ion batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

**If you have any problems or queries please contact our Customer Relations Team.**

These instructions are also available on our website [www.tefal.com](http://www.tefal.com).

**STRAIGHT & STYLE****POWER BANK ONLY FOR PHONE**

# Tefal®

Beauty

**Nomad**[www.tefal.com](http://www.tefal.com)

1820002896

