



www.tefal.com

IMPORTANT SAFETY INSTRUCTIONS

- When using your appliance, basic precautions should always be followed, including the following:
- Read all instructions before using this appliance.
- This appliance has been designed for indoor, domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- Always plug your appliance:
 - into a mains circuit with voltage between 220 V and 240 V.
 - into an earthed electrical socket.

Connecting to the wrong voltage may cause irreparable damage to the appliance and will invalidate your guarantee.

Do not use an extension lead. If you accept liability for doing so, only use an extension lead which is in good condition, has a plug with an earth connection and is suited to the power rating of the appliance.

- Completely unwind the power cord before plugging into an earthed socket.
- Use appliance for its intended use only.
- To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never unplug the appliance by pulling on the power cord; instead, grasp plug and pull away from the socket to unplug the appliance.
- Do not allow the power cord to touch hot surfaces or come into contact with rough or sharp edges. Let the appliance cool completely down before putting away. Loop cord loosely around appliance when storing.
- Before filling or emptying the water tank, cleaning, or removing or refitting accessories, ensure that the appliance is unplugged an completely cool.
- Care should be taken when using the appliance due to the emission of steam.
- The appliance must not be used if it has been dropped, if it has any visible damage, if it leaks, or if it functions abnormally in any way. Do not attempt to dismantle your appliance: have it examined at an Approved Service Centre to avoid any danger.
- Close supervision is necessary for any appliance being used by or near children.

- Never leave the appliance unattended when it is connected to the mains. Before storing the appliance, once it is unplugged, please wait until it has cooled down (around 1 hour).
- Burns could occur from touching hot metal or plastic parts, hot water or steam. Use care when you empty a steam appliance. There may be hot water in the reservoir.
- Do not use an extension lead. If you accept liability for doing so, only use an extension lead which is in good condition, has a plug with an earth connection and is suited to the power rating of the appliance.
- Never immerse your appliance in water or any other liquid. Never place it under a running tap.
- Do not direct steam at people, animals or clothes while they are being worn.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The use of accessory attachments other than those provided by the manufacturer is not recommended and may result in fire, electric shock or personal injury.

- The appliance must be used and placed on a flat, stable, heat-resistant surface. When you place the appliance on its stand, ensure that the surface on which the stand is placed is stable.
- The appliance must not be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Check the electrical power cord and steam cords for signs of wear or damage prior to use. If the electrical power cord or the steam cord is damaged, it must be replaced by an Approved Service Centre to avoid any danger.
- Do not use other descaling products than the one cited in the IFU.
- Do not obstruct the appliance airways.

Before first use

• When you first use the appliance, some smoke or a harmless odour may be produced or there may be a small discharge of particles. This will not affect the use of the appliance and will disappear quickly.

What water to use?

Your appliance has been designed to use untreated tap water.

Do not use pure demineralised or pure distilled water, water from clothes dryers, scented or softened water, rain water, filtered, bottled or boiled water, water from refrigerators, batteries or air conditioners as these may damage the appliance. These types of water contain organic waste, mineral elements that become concentrated when heated and cause spitting, brown staining, leaking or premature wear on your appliance. If your water is very hard, mix 50% untreated tap water with 50% distilled water (available in hardware stores).

SAVE THESE INSTRUCTIONS

TROUBLESHOOTING

Problems	Possible causes	Solutions
There is no steam.	The appliance has not been turned on.	Check that the appliance has been plugged in correctly. Next press the On/Off pedal, the power indicator light located at the front of the appliance will come on.
	The hose has been obstructed.	Check that the hose is not bent or twisted.
	There is no water left in the water tank.	Unplug the appliance and fill the water tank.
	The steam is not ready yet.	The appliance will produce steam about 45 seconds after it has been switched on.
The steam flow is low.	Your steamer has a build-up of scale because it has not been rinsed out regularly.	See descaling process (Descaling procedure paragraph).
	The hose has been obstructed.	Check that the hose is not bent or twisted. Always extend fully the pole.
	There is no water left in the water tank.	Unplug the appliance and fill the water tank.
Water runs through the holes of the steam head.	There is condensation in the hose.	Never use a steamer in the horizontal position. Hold the hose vertically outstretched and wait for the condensed water to return to the steamer. Always extend fully the pole.
The steamer takes a long time to heat and/or ejects white particles.	Your steamer has a build-up of scale because it has not been descaled regularly.	See descaling process (Descaling procedure paragraph).

ENVIRONMENTAL PROTECTION FIRST !



① Your appliance contains valuable materials which can be recovered or recycled.

Cleave it at a local civic waste collection point.

중요 안전 지침

- 제품 사용시에는 다음과 같은 기본 주의 사항을 준수해 주십시오.
- 제품 사용 전에 모든 지침을 읽어보십시오.
- 본 제품은 가정 및 실내 전용으로 설계되었습니다. 상업적 용도, 부적절한 사용 또는 사용 설명을 준수하지 않아 발생한 문제에 대해 제조사는 그 어떤 책임도 지지 않으며 품질 보증 혜택을 받으실 수 없습니다.
- 본 기기는 AC(교류) 전류에만 연결하여 사용하도록 설계되었습니다. 제품을 처음 사용하기 전, 제품의 정격 표기 부분에 기재된 공급 전압이 가정 내 전압 시스템과 일치하는지 확인하십시오.
- 전압이 맞지 않아 발생한 문제의 경우, 품질 보증 혜택이 적용되지 않습니다
- •제품의 전원은 반드시 접지 콘센트에 연결하시기 바랍니다.
- 나라마다 서로 다른 전기기준이 시행되고 있으므로, 이 제품을 구입한 곳이 아닌 다른 국가에서 사용할 때에는 반드시 공인된 서비스 센터에서 확인을 받으십시오.
 접지 소켓에 플러그를 꽂기 전에 전선을 완전히 풀어야
- 접시 오켓에 들티그들 숯기 신에 신신들 관신이 물어야 합니다.
- 원래 용도 외의 다른 용도로 제품을 사용하지 마십시오.
- · 스팀 구멍에서 내뿜는 뜨거운 물이나 스팀에 접촉할 위험을 줄이기 위해서, 매 사용 전에 기기를 신체에서 떨어지게 잡고서 기기를 작동하여 확인하십시오.

- 이상의 어린이 및 제한된 신체적, • 8세 감각적 정신적 력을 치녔거나 경험이나 지식이 부족한 사람일 지라도 있거나 안전하게 독하는 사람이 릌 사용하 기 법과 발생할 수 있는 위험을 인식하고 있 기를 사용할 수 있습니다. 어린이가 제 난치지 않도록 직도하십시오. 아이들은 방법 경우 0 제품 가지 ה 을 받지 얁 이 기기를 청소하거나 유지보수 해서는 하 아 됩니! • 제품 LIC 전선을 콘센트에서 잡아당겨 빼지 마십시오. 잡고 콘센트에서 빼십시오 플 러 거칠거나 날카로운 날에 닿지 전선이 뜨 거 유 표면 또는 하십시오 기가 완전히 식은 후 보관하십시오. 선을 기 저나물리는 기에 느슨하게 감아 보관하십시오 탱 크를 채우거나 비우고, 청소하거나, 액세서리를 는 장착하기 기기 플러그를 빼고 완전히 뚜 전 식 것 을 확인하십 시오 팀 이 분출되니 사용시 주의해야 합니다. • 스
- 제품을 떨어뜨렸거나, 제품에 눈에 띄는 손상이 있거나, 비정상으로 작동할 경우에는 본 제품을 사용해서는 안됩니다. 제품을 분해하려고 하지 마십시오. 위험 방지를 위해 공인 서비스센터에서 점검을 받으십시오.
- 기기를 어린이가 사용하거나 어린이 가까이서 사용할 때는 철저한 감독이 필요합니다.
- 제품이 전전에 연결되어 있을 때는 자리를 비우지 마십시오. 제품을 보관하기 전, 플러그를 뽑고 냉각될 때까지 기다리십시오(약 1시간). • 뜨거운 금속이나 플라스틱 부품, 뜨거운 물이나 증기에
- 뜨거운 금속이나 플라스틱 부품, 뜨거운 물이나 증기에 닿아 화상을 입을 수 있습니다. 스팀 사용 기기의 물을

때는 주의해 주십시오. 물탱크 물이 뜨거울 수 즙니 있. 니다

- 연장선을 사용하지 마십시오. 책임을 질 경우, 상태가 양호하고 제품 전압 정격에 알맞은 연결선 연장선 사용에 대하 접지 플러그가 있고, 경우, 상태가 양호하고 연결선만을 사용하십시오
- 액체에 담. 그지 마십시오 제품을 • 다리미를 E 아래 에 마
- 사람 동물 옷 음 입고 있는 상태에서 옷에 직접 ςμ 마십시 팀을 분사 하지 人 오
- 수 • 안전에 대한 임을 질 있는 사람이 제품 책 사용을 감독하거니 지시하지 않는 한 신체적 감 정신적 제한되었거나 경험 및 신0 련이 부 지 함)은 품을 (어린이 제 용할 없 습 푸 0 Ē 감독해야 한 아이들이 기 기를 기 고놀지 ト지 않드
- 않은 언 제공하지 추 • 제 체가 권장하지 Ϋ́ 부 상을 ò 않 오
- 정되고,내열표면에 다리미를 놓을 때, 평평하 안정되고 사용해야 • 71 받 .[다 침 대에 표면이 · 젠품을 떨어뜨리거니 니다
- 떨어뜨리거나, 외관상 분명히 손상되었거나 제품을 사용해서는 안 물이 샌다면 됩니다
- 하 상 징후가 사용 전에 전선에 마모 있는지 었을 고이 검하 점 전선이 손상되 경 시오 0 Πī 스센터에서 교체하여 위험을 방지해야 합니 서비 니다.
- 사용설명서에 명시된 것 외의 다른 석회질 제거 제품은 사용하지 마십시오
- 통풍 막지 마십시오. 제품

첫 사용 전

다리미를 처음으로 사용할 때, 연기나 무해한 냄새가 약간 나거나 작은 조각들이 나올 수 있습니다.
 이것은 다리미의 사용에 영향을 미치지 않으면서 곧바로 사라집니다.

어떤 물을 사용할까요?

• 이 기기는 가공하지 않은 수돗물을 쓰도록 만들어졌습니다.

순수한 미네랄 제거한 물 또는 순수한 증류수, 건조기에서 나온 물, 향 첨가하거나 연수처리된 물, 빗물, 필터 처리한 물, 병에 든 먹는 샘물, 끓인 물, 냉장고, 배터리 또는 에어컨에서 나온 물은 사용하지 마십시오. 기기가 손상될 수 있습니다. 유기성 폐기물, 미네랄이 함유된 이런 물은 열을 가하면 농축되어 물이 튀거나, 갈색 흔적을 남기거나 물이 새거나 또는 기기가 조기 노후할 수 있습니다. 물이 경도가 아주 높다면, 비가공 수돗물 50%와 증류수(화공약품상에서 구할 수 있습니다) 50%를 섞으십시오.



문제 해결

문제점	가능한 원인	해결 방법
스팀이 나오지 않습니다.	제품 전원을 켜지 않았습니다.	플러그가 제대로 꽂혀 있는지 확인하십시오. On/Off 버튼을 누르면, 제품 앞면의 전원 표시등이 켜집니다.
	호스가 막혀 있습니다.	호스가 구부러지거나 꼬여 있는지 확인하십시오.
	탱크에 물이 없습니다.	플러그를 뽑고 물탱크를 채웁니다.
	스팀이 아직 준비되지 않았습니다.	제품 전원을 켜고 약 45초 후 스팀이 생성됩니다.
스팀 양이 적습니다.	기기를 정기적으로 헹구지 않아 물때가 쌓였습니다.	≪제품유지 관리 및 청소≫ 과정을 따라 하십시오.
	호스가 막혀 있습니다.	호스가 구부러지거나 꼬여 있는지 확인하십시오.
	탱크에 물이 없습니다.	플러그를 뽑고 물탱크를 채웁니다.
스팀 헤드 구멍에서 물이 흐릅니다.	호스 안에 물이 고여 있습니다.	스팀 다리미를 수평으로 놓고 사용하지 마십시오. 호스를 수직으로 들고 고인 물이 스팀 다리미 안으로 되돌아갈 때까지 기다리십시오. 기둥을 당겨 완전히 연장하십시오.
스팀 다리미 가열에 시간이 오래 걸리고/또는 하얀 가루를 분사합니다.	기기를 경기적으로 헹구지 않아 물때가 쌓였습니다.	≪제품유지 관리 및 청소≫ 과정을 따라 하십시오.

환경 보호 우선!

X

⑦ 본 제품은 회수 또는 재활용할 수 있는 소재를 포함하고 있습니다.
○ 재활용 장소에 분리 수거해 주십시오.



* **EN** Depending on model / **KO** 모델에 따라 다름

PRODUCT DESCRIPTION / 제품 설명

- 1. EN Hanger + hanger hook KO 옷걸이 + 옷걸이 걸이
- 2. EN Steam Head* KO 스팀 헤드*
- 3. EN Steam Hose KO 스팀 호스
- 4. EN Adjustable pole + adjustable vertical support hook* + Power cord hook
 - KO 길이 조절 기둥 + 다림판 지지대* + 전선 걸이
- 5. EN Control panel KO 컨트롤 버튼
- 6. EN ON/OFF button KO ON/OFF 버튼
- 7. EN Steam level led* KO 스팀량 조절 LED*
- 8. EN Anti-calc button KO 석회질 제거 버튼

- 9. EN Water tank button KO 물탱크 버튼
- 10. EN Removable Water tank KO 탈착식 물탱크
- 11. EN Draining Cap KO 물빼기 마개
- 12. EN Removable vertical support* KO 분리형 수직 다림판*
- **13. EN** Fabric Brush * KO 패브릭 브러시*
- 14. EN Steam bonnet* KO 스팀 커버*
- **15. EN** Lint pad* **KO** 먼지제거 패드*
- 16. EN Glove* KO 장갑*
- 17. EN Crease attachment* KO 주름 클립*

* EN Depending on model / KO 모델에 따라 다름









* EN Depending on model / KO 모델에 따라 다름









For optimal use, press the steam jets on your garment from top to bottom.

위에서 아래로 스팀을 분사하면 더욱 효과적으로 옷을 다릴 수 있습니다.

Never steam a garment while it is being worn. Always hang on the stand or on a hanger.

옷을 입은 상태에서 절대 스팀 다림질을 하지 마십시오. 꼭 옷을 스탠드나 옷걸이에 걸고 하십시오.

5. DURING USE / 사용 중

If "WATER" button is flashing, the level of water in the water tank is low and must be filled.

"WATER" 버튼이 깜박거리면, 물탱크 수위가 낮아 물을 채워야 합니다.









Roll up the power cord and place it on its power cord hook.

전선을 정리해 전선 후크에 겁니다.

EN

KO

EN

KO

EN

KO

EN |

KO

Wait for an hour for your appliance to cool before storing.

제품을 보관하기 전에 약 1시간 동안 제품의 열기가 식을 때까지 기다리시기 바랍니다.

Make sure the water tank is empty before moving the appliance on its wheel.



7. DESCALING PROCEDURE / 석회질 _____게거 과정

To apply when the "anti-calc" button is flashing. Reset by pressing the button.

"석회질 제거" 버튼이 깜박일 때 적용됩니다. 버튼을 눌러 리셋합니다.









	8. CLEANING/청소	
	EN KO	Wait an hour for complete cool down. 1시간가량 제품이 완전히 식을 때까지 기다립니다.
	EN KO	Only use a sponge with water to clean the base. Never put water on control panel. 부드러운 스펀지와 물만 사용해 받침대를 세척합니다. 컨트롤 버튼에는 물이 닿지 않게 하십시오.
	EN KO	Only use a sponge with water to clean the steam head. Never put water on +/- buttons and leds 부드러운 스펀지와 물만 사용해 스팀 헤드를 세척합니다. +/- 버튼과 LED 등에는 물이 닿지 않게 하십시오.
	EN KO	Never use detergents when cleaning your appliance. 기기 청소시에 세제를 사용하지 마십시오.
30		

